Santek®

モバイルモニター

Mobile Monitor

取扱説明書
User Manual

本製品を安全にご使用いただくために、
ご使用前に本書をよくお読みいただき、正しくお使いください。

安全上のご注意

デバイスを使用する前に、使用説明書を必ずお読みください。本製品は個人向けの使用で設計されていますが、誤って使用すると感電や火災が発生するおそれがあります。機械内部の安全部品が損傷しないように、下記のルールを守ってください。

警告	取扱いを誤った場合、使用者が死亡または重傷を負うことが想定される危害の程度	⚠警告
注意	取扱いを誤った場合、使用者が軽傷を負うことが想定されるかまたは物的損害の発生が想定される危害・損害の程度	⚠注意

⚠警告　設置・保存場所・使用環境

- **風呂、シャワー室では使用しないでください。**
  火災・感電の原因になります。
- **不安定な場所に置かないでください。**
  落下して、けがの原因になります。
- **濡れた手で電源プラグ、本体、アダプターに触れないでください。**
  感電の原因になります。雪、雨などが降る屋外では使用しないでください。
- **開口部に異物や液体が入らないようにしてください。**
  感電の原因になります。
- **幼児の手の届かない所に設置してください。**
  落下して、けがの原因になります。
- **調理台や加湿器の近くなど油煙や湯気があたる場所に設置しないでください。**
  火災・感電の原因になることがあります。
- **直射日光があたる場所や、温度が異常に高くなる場所（暖房機のそばなど）に設置しないでください。**
  キャビネットや内部回路に悪影響が生じ、火災の原因になることがあります。
- **アルコール・シンナーなどの引火性溶剤の近くに設置しないでください。**
  引火性溶剤が本機内部の電源部品などに接触すると、火災や感電の原因になります。

⚠警告　異常発生時

- **分解、改造を絶対にしないでください。**
  動作のトラブルおよび電源が入らない場合は、本書の『トラブルシューティング及びQ&A』をお読みになり、該当事項別に確認をお願いします。
- **雷が鳴りだしたら金属部分に触れないでください。**
  落雷すると感電の原因になります。
- **発熱したら、すぐに電源スイッチを切り、給電ケーブルを抜いてください。**
  そのまま使用すると火災やケガ、火傷の危険があります。
- **使用中、落下や衝撃により破損したら、すぐに電源スイッチを切り、給電ケーブルを抜いてください。**
  火災やケガの危険があります。

安全上のご注意

⚠注意　設置・保存場所・使用環境

- **本機の上に重いものを置かないでください。**
  バランスがくずれて倒れたり、落下したりして、けがの原因になることがあります。
- **液晶画面は、傷がつきやすいので、先のとがったもの（シャープペンシル、ボールペンなど）で液晶画面をたたいたり、ひっかいたりしないでください。**
  故障の原因になります。
- **室内専用です。**
  防水加工は施されておりません。
- **落としたり、強いショックを与えないでください。**
- **避けて欲しい保存場所**
  次のような場所での本機の使用・保管は避けてください。
  直射日光の当たるところや夏場の密閉した自動車内など、高温になるところ／極端に寒いところ／振動の激しいところ
  強い電磁場の発生するところ (放送塔、送電線、レーダー、モーター、トランス、磁石のそばなど)
  防虫剤などの薬品やゴム、ビニール製品に長時間接触するところ／冠水、浸水、砂かぶりにご注意ください。
- **結露（つゆつき）にご注意ください。**
  本機を寒いところから急に暖かいところに持ち込んだときなどに、本機内外部に水滴がつくこと（結露）があります。
  このようなときは電源を切り、水滴がなくなってからお使いください。
- **長時間ご使用にならない場合。**
  本機を長時間ご使用にならない場合は、モニターの電源を切ってください。
- **本製品には、有寿命部品が含まれています。使用頻度や使用環境によって異なりますが、経年変化による消耗、劣化が生じ、動作が不安定になったり、動作しなくなる場合があります。**
- **製品および製品箱などを投げたり落としたりしないでください。また製品箱の上には他の重い物を置かないでください。**
  液晶パネル及び本体のケースが破損することがあります。

⚠注意　AC 電源アダプター・電源プラグ・コンセント・コネクター

- **接続コードが傷んだり、差し込みがゆるいときは使用しないでください。**
- **コネクターの内部にクリップやドライバーなどの金属片を入れないでください。**
  ピンがショートして、火災や火傷、故障の原因となることがあります。
- **コネクター類はまっすぐに差し込んで接続してください。**
  斜めに差し込むと、ピンがショートして、火災や火傷、故障の原因となることがあります。
- **接続コードを外す際はプラグのつまみをしっかり握り、ゆっくり抜いてください。**
  接続コードを引っ張ると、電源の切断により、電源がつかなくなったり、火災の原因になります。

安全上のご注意

⚠注意	異常発生時

● **液晶パネルが破損した場合、中の液晶には十分にご注意ください。**
万一のときは、応急処置を行ってください。

・皮膚に付着した場合：付着物を拭き取り、水で流し、石けんでよく洗浄したあと、医師の診断を受けてください。
・目に入った場合：きれいな水でよく洗い流し、最低 15 分間洗浄したあと、医師の診断を受けてください。
・飲み込んだ場合：水でよく口の中を洗浄してください。大量の水を飲んで吐き出したあと、
医師の手当を受けてください。

⚠注意	その他

● 磁気や電磁妨害によって、映像が乱れたり、雑音が発生する可能性があります。

● ゲーム機等を接続した場合、ゲーム内容によってはタイムラグが生じる場合があります。

● 液晶モニター表面などの汚れはブロアーブラシなどでほこりを払い、乾いた柔らかい布などで軽く拭いてください。

● 液晶モニター表面などは傷つきやすいので、固いものでこすったりしないでください。

● 本機の本体は、乾いた柔らかい布などで拭いてください。

● 掃除の際には必ず接続コードを外し、乾燥した柔らかい布で拭いてください。

● 電圧 5V、電流 3A 以上の電源装置を使用してください。

● 画面上の静止画が長時間表示されると、画面が破損し、残像が生成されます。
スクリーンセーバー、残像、および関連する問題は製品の修理範囲外であることを確認してください。

● 赤、緑、および青のドットが画面に表示されることがありますが、ディスプレイ機能には影響しません。

● 推奨される解像度を使用して最適な状態でお使いください。
推奨解像度以外の解像度を使用した場合、画面に異常が発生することがありますが、固定解像度の LCD パネルの特徴です。

モニター本体は大変薄く作られておりますので持運びの際、ご注意ください。

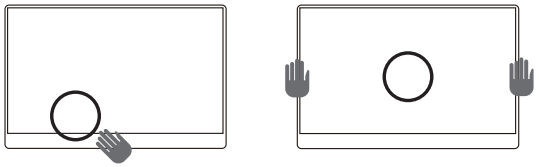

モニター下部のフレーム部分を持つか、両手で両サイドをお持ちください。

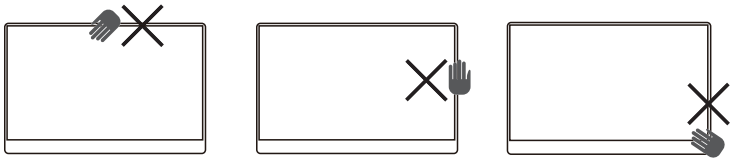

上記のようにどちらかの面を片手で持ち上げたりしないでください。

内容物

開封時、以下が全て揃っているか確認してください。使用済みの梱包材は、
今後本製品を運搬・輸送する時のために保管してください。

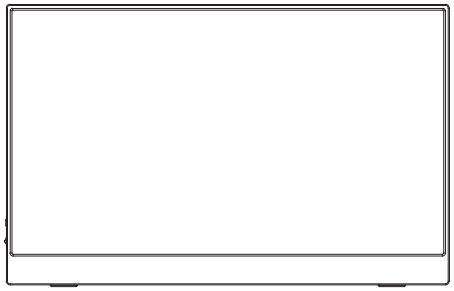

モバイルディスプレイ× 1

Type-C to Type-C
ケーブル×1

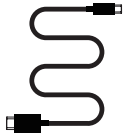

Type-C to USB
ケーブル× 1

Mini HDMI to HDMI
ケーブル× 1

スクリーン
クリーニングクロス× 1



説明書× 1

各部名称・接続方法

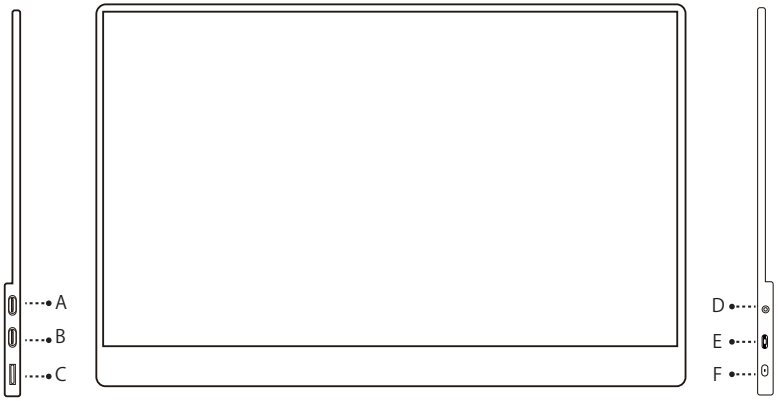

A USB Type-C

- 電源供給
- 音声・映像出力

B USB Type-C

- 電源供給
- 音声・映像出力

※オルタネートモード仕様のPCとはType-C to Type-Cのケーブル1本で接続が可能です。

C MINI HDMI

- 音声・映像出力

D イヤホンジャック

- 3.5mmイヤホンジャック

E 各種設定ジョグダイヤル

- 明るさ/コントラスト
- 色設定
- オーディオ設定
- その他の設定
- 信号ソース

※各項目に対してさらに詳細な設定が可能です。詳しくは7～8ページを参照ください。

F 電源ボタン

- 信号ソース
- メニュー画面表示時のキャンセル

接続例

PCとの接続　1（オルタネートモード仕様）

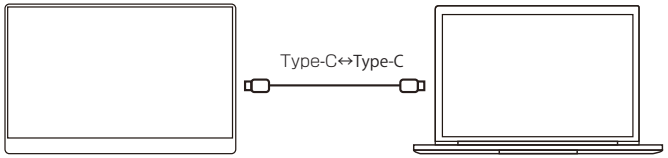

1本のType-CケーブルでPCとの接続(音声、映像、給電)が可能。
※お手持ちのPCがオルタネートモード対応である必要があります。
※USBポートの電力が不足している場合は外部より電源供給を行ってください。

PCとの接続　2

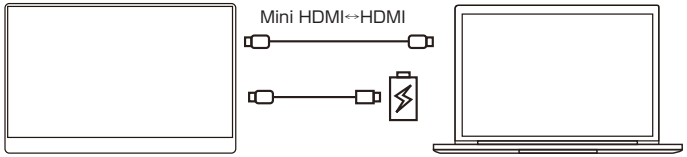

Mini HDMI↔HDMIで映像・音声を、Type-C↔USBで電源供給を行う。
※モニターの給電は付属のType-C→USBをアダプターに差しコンセントから行ってください。

スマートフォンとの接続

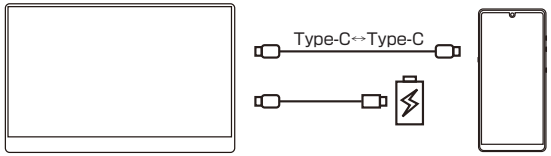

スマートフォンとの接続は外部電源を使用し、外部より電源供給を行ってください。
※iPhoneとの接続はLightning - Digital AVアダプターが必要です。

任天堂スイッチとの接続

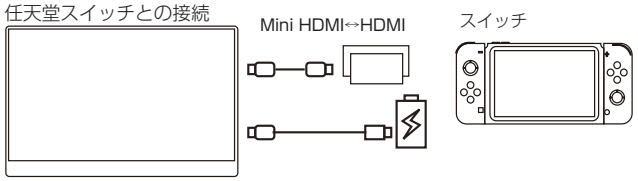

スイッチ付属のドックセットにスイッチをセット後　ドックセットにHDMI差し込み
モニターの給電は付属のType-C→USBをアダプターに差しコンセントから行ってください。

詳細設定



E　各種設定ジョグダイヤル

- 明るさ/コントラスト
- 色設定
- オーディオ設定
- その他の設定
- 入力

※各項目に対してさらに詳細な設定が可能です。
詳しくは別ページを参照ください。

F　電源ボタン

- 入力端子の選択
- メニュー画面表示時のキャンセル

各種設定機能を使うことで、より快適にご使用いただけます。モニターに向かってスタンド右側面中央のＥジョグダイヤルで簡単に設定が可能です。
設定項目は以下となります。
①明るさ/コントラスト
②色設定
③オーディオ設定
④その他の設定
⑤入力

①明るさ/コントラスト設定

※操作例：明るさ / コントラストの設定画面となります。

①ジョグダイアルを１回押すと右図の画面が左下に表示されます。

②メニューを選択するには、ジョグダイヤルを上下に押します。

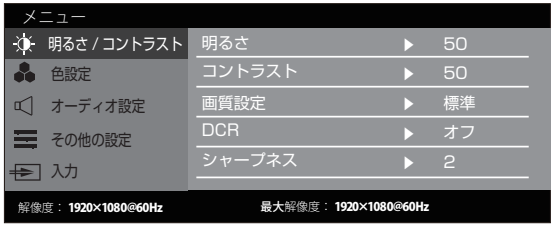

①-2　明るさ→明るさ

③変更したいメニューが決定したらジョグダイヤルを１回押します。

④詳細画面が表示されますので、更にジョグダイヤルを上下に押してメニューを選択した後、再度、ジョグダイヤルを押します。

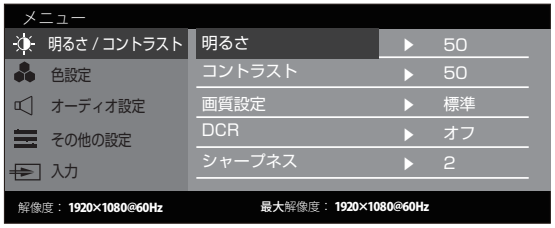

①-3　明るさ→明るさ→0 ～ 100

⑤指定したメニューの変更が可能になりますので、ジョグダイヤルを上下に押して調整を行ってください。

⑥設定が完了しましたら電源ボタン【F】を押してメニュー画面を消してください。

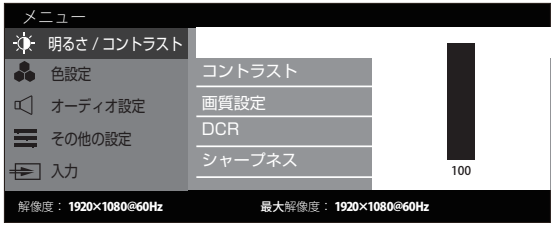

設定を中止して他のメニューへ戻る時は電源ボタン【F】を戻りたいメニューまで押してください。

② 色設定

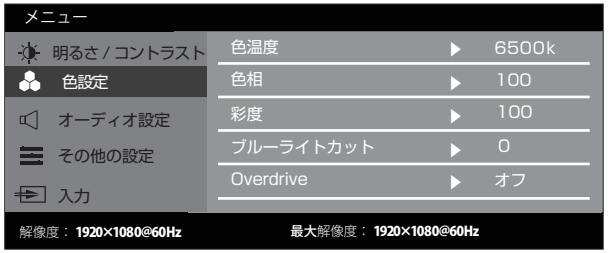

①色温度＝6500ｋ / 9300ｋ / ユーザー
※ユーザー設定の際は更に微調整可能
②色相＝0～100
③彩度＝0～100
④ブルーライトカット＝0～100
⑤Overdrive＝オン/オフ

③ オーディオ設定

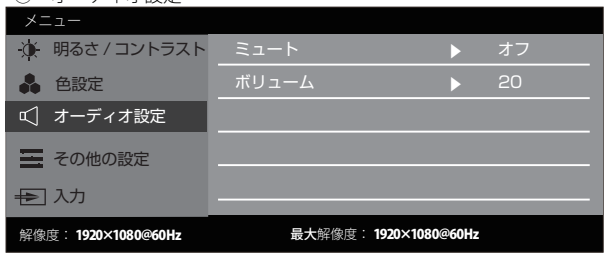

①ミュート＝オン/オフ
②ボリューム＝0～100

④ その他の設定

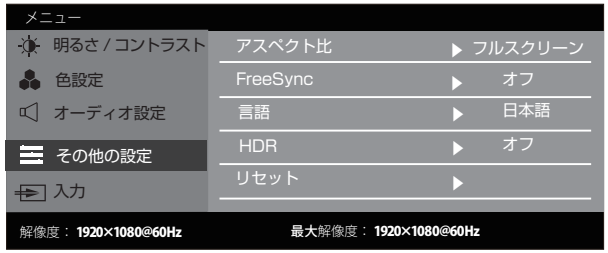

①アスペクト比＝フルスクリーン/4:3
②FreeSync=オン / オフ
③言語＝ English / Deutsch / Español
中文 / 日本語
④HDR＝オフ / 自動 / オン
⑤リセット＝(注意)リセットを選択した場合、選択肢は無くジョグダイヤルを押すと直ぐにリセットされますのでご注意してください。

⑤ 入力

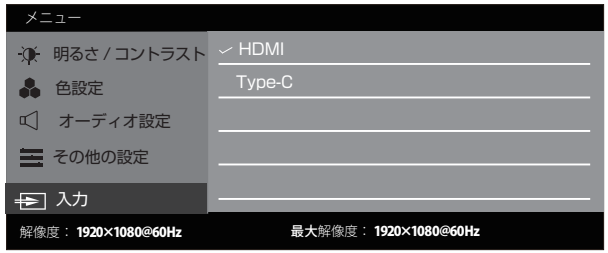

①HDMI
②Type-C
※入力に関してはType-Cもしくは、HDMIのみの選択となります。

Q&A

質　　問	回　　答
Q. 画面が表示されず、電源も入らない。	A. 電源ボタンを押してモニターの電源が入っているかを確認してください。また、USB ケーブルがモニターの電源コネクタに正しく接続されているかを確認してください。
Q. 画面が表示されず、ジョグダイヤル内の電源ランプが赤く点灯している	A. モニターと接続されている機器の電源が入っているかを確認してください。信号ケーブルを確認し、ピンの折れや曲がりがないかを確認してください。他のデバイスに接続をして症状を確認してください。
Q. 画面の色が正しく見えない。	A. 接続ケーブルを確認し、ピンが曲がっていないことを確認してください。
Q. 画面にコンテンツが表示されているときに点滅する。	A. 画面がちらつく場合は、電源のW数が充分かどうかを確認してください。モニターへの電源供給は 15W以上に対応した電源アダプターをお勧めいたします。 モニターと接続されたデバイスのケーブルが正しく接続されているかを確認してください。他の電子機器との干渉を避ける為に離してご使用ください。

アフターサービス

- 本製品の保証を受ける場合、製品保証書（本書）が必要となります。
- 保証書：販売店・お買上げ年月日等の記入をお確かめの上、保証規定の内容をよくお読みいただき、大切に保管してください。
- 修理を依頼される場合、保証期間中は、無償で修理もしくは交換いたします。
  ただし、本証に記載の安全及び仕様に関する注意事項を無視した上での故障や破損、無断で分解・改造を加えた場合などは、有償となる場合があります。
  また、保証期間を過ぎた場合も有償での修理・交換となります。
- 廃棄について：本製品及び梱包材の廃棄方法については、自治体の指示に従って行ってください。本証の内容及び製品仕様は、予告なく変更されることがあります。
- 修理・点検に関するご相談・ご不明な点は、サンテックショップまでお問合せください。

保証書・修理依頼票

品名：モバイルモニター

保証期限：本体お買い上げ日より６か月

お買い上げ日　　年　　月　　日

フリガナ

お名前：

ご住所：〒

電話番号：

販売店名：　サンテックショップ

故障状況

保証規定

1. 取扱説明書・本体貼付ラベル等の注意書きに従った正常な使用状態で、保証期間内に故障した場合には、当社にご連絡ください。無償修理・交換いたします。
2. 保証期間内に故障して無償修理・交換をお受けになる場合には、本書を同封の上 当社までお送りください。
3. ご転居やご贈答品等で、本書に記入してあるお買い上げ販売店に修理をご依頼になれない場合には、当社へご相談ください。
4. 保証期間内でも、次の場合には有償修理になります。
   - 使用上の誤りや、お客様による修理や改造による故障および損傷
   - お買い上げ後の落下等による故障および損傷
   - 火災・地震・水害・落雷・その他の天災地変、公害や異常電圧による故障および損傷
   - 一般家庭用以外（例えば、業務用の長時間使用）に使用された場合の故障および損傷
   - 本書の提示が無い場合
   - 本書にお買い上げ年月日・お客様名・販売店名の記入のない場合、あるいは字句を書き替えられた場合
   - 本体および本体同梱付属品の消耗・摩耗・故障・損傷・紛失
5. 本保証書は日本国内においてのみ有効です。
6. 本書は再発行しませんので、紛失しないように大切に保管してください。この保証書は本書に明示した期間・条件のもとにおいて無償修理・交換のお約束をするものです。したがって、この保証書によってお客様の法律上の権利を制限するものではありません。

お客様個人情報のお取扱いについて

弊社は、お客様の住所・氏名・電話番号等の個人情報を大切に保護するため、個人情報保護に関する法令を遵守すると共に電話問い合わせ時、あるいは修理依頼時にご提供いただいたお客様の個人情報を適切に管理いたします。また、正当な理由がある場合を除き、第三者に開示・提供いたしません。

＜利用目的＞

お客様の個人情報はお客様のお問合せに対する弊社からの回答、修理サービスのために利用し、その記録を残すことがあります。

Mobile Monitor

User Manual

To use the product safely, be sure to read this manual carefully, and keep it in a safe place after reading.

Package Contents

Make sure you have received all the components.
Please keep the used packaging materials for future use.

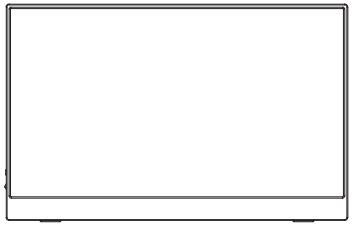

Mobile Monitor x1

Screen Cleaning Cloth x1

Type-C ⇔ Type-C Cable x1

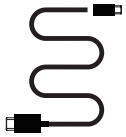

Type-C ⇔ USB Cable x1

Mini HDMI⇔ HDMI Cable x1



User Manual x1

Safety Precautions

Please read this manual carefully before use. Although this product is designed with consideration of individual usage conditions, improper use can cause electric shock or fire. Proper installation and maintenance are needed to prevent damages.

WARNING	Degree of harm which the user is expected to suffer death or serious injury if handled incorrectly.	⚠ **WARNING**
ATTENTION	Degree of harm or damage which the user is expected to suffer minor injury or physical damage if handled incorrectly.	⚠ **ATTENTION**

⚠WARNING Setting/Storage Location/Use Environment

- Do not use in the bathroom. It may cause fire or electric shock.
- Do not place in an unstable/uneven place. It may fall and cause injuries.
- Do not touch the power plug, adapter and product with wet hands. It may cause electric shock.
- Avoid foreign matter/ liquid spilling into the ventilation opening. It may cause electric shock.
- Keep out of reach of children. It may fall and cause injuries.
- Do not place in kitchen area or near humidifier. It may cause fire or electric shock.
- Do not place under direct sunlight or near heat sources. The housing and internal circuits may be affected and cause fire.
- Do not place near inflammable solvent (e.g. alcohol or paint thinner). It may cause fire or electric shock.

⚠WARNING Troubles

- Do not disassemble. Refer to “Q&A” section of this manual when in trouble.
- Do not touch any metal parts when you hear thunder. It may cause electric shock.
- Turn off the power and disconnect the AC adapter immediately if the unit gets overheated. It may cause fire and body injury.
- Turn off the power and disconnect the AC adapter immediately if it is damaged by dropping or impact during use. It may cause fire and body injury.

⚠ ATTENTION Setting/Storage Location/Use Environment

- Do not place heavy objects on top of the unit. It may lose balance or drop which causes damage.
- Do not hit or scratch the LCD screen with a pointed object. This may damage the screen.
- This product is for indoor use only. It is not waterproof.
- Do not drop or impact the unit.
- Avoid use and storage in following environments: Direct sunlight/ Hot; Extreme Cold; Vigorous vibration; Strong EM waves (broadcast tower/ cables/magnets/ radar/ motor, etc.) Prolonged contact with rubber, vinyl products, or chemicals. Near water or sand.
- Beware of condensation. When suddenly brought into a warm room from the cold, condensation may form on outside and inside of the unit. Disconnect the power, wait until it gets dry before use.
- Turn off the power if you do not use it for a long period of time.
- This product contains materials with a limited life. Depending on the usage frequency, operating and storage environment, it may wear out or deteriorate over time, resulting in instability or inability to operate.
- Do not throw or drop the unit or the package. Also do not place heavy objects on top. LCD display and the unit may be damaged.

⚠ ATTENTION AC Adapter/Outlet socket/connector

- Do not use any damaged or loose cable. It may cause fire or electric shock.
- Do not put metal items inside of the connector. The pins may short-circuit and cause fire, burn, or malfunction.
- Insert the cable connectors straight. If inserted at an angle, pins may short-circuit, resulting in fire, burn, or malfunction.
- When unplug, grip and pull from connector end of cable . When cable is pulled instead, it may cause damage, failure in power connection, fire, or electric shock.

⚠ ATTENTION Troubles

If the LCD panel is damaged, please do the following:

- Skin contact: Wipe off any deposits, flush with water, wash thoroughly with soap and then get medical attention.
- Eye contact: Wash thoroughly with clean water, wash for at least 15 minutes, then get medical attention.
- If swallowed: Wash the mouth often with water. Drink plenty of water and exhale, then get medical attention.

⚠ ATTENTION Others

- Magnetic or electromagnetic interference may cause distorted images and noises.
- A time lag may occur when displaying contents of game consoles.
- Clean LCD monitor with a blower brush, or wipe gently with a dry soft cloth.
- Do not wipe with hard object.
- Clean and wipe the unit with dry soft cloth.
- Unplug all cable connections while cleaning.
- Use only power devices with more than 5V and 3A. USB 3.0 devices can supply the power for the display. Do not use the power below 5V and 3A.
- A prolonged still image on screen may cause damage to the screen and produce afterimages. The afterimage and related issues are not covered by the product warranty.
- Red, green, and blue pixel abnormality may appear on the screen. It does not affect the display function.
- Use the recommended resolutions for best results. When other resolutions are in use, a screen abnormality may occur.

Screen is slim, please take care when holding.

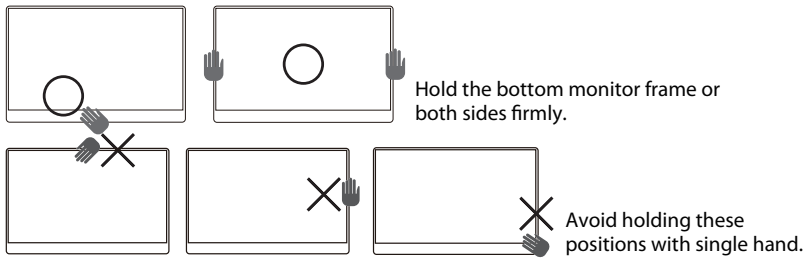

Parts /Connections

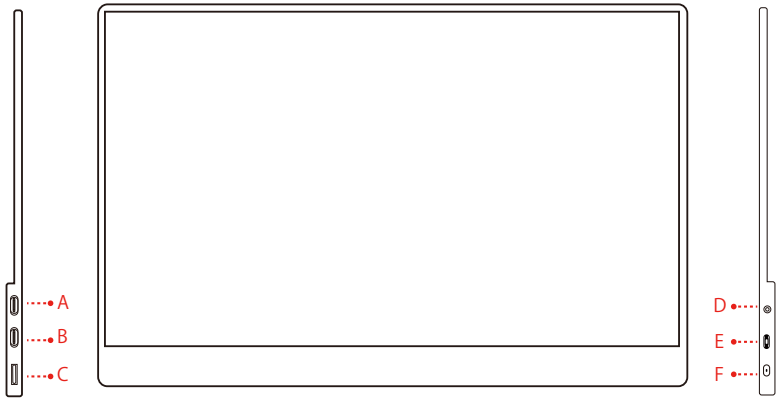

A USB Type-C Port

- Power Supply
- Audio/Video Output

B USB Type-C Port

- Power Supply
- Audio/Video Output

When connected to PC (support ALT mode), only 1 Type-C ⇔ Type-C is needed for power and A/V output.

C Mini HDMI

- Audio/Video Output

D Headphone jack

- 3.5mm Headphone Jack

E Jog Dial

- Brightness/Contrast
- Color Setting
- Audio Setting
- Other Setting
- Input

See page 7-8 for more detail settings.

F Power Button

- Select Input Source
- Return in OSD menu

1. Connection examples

Connect to PC 1 (support ALT mode)

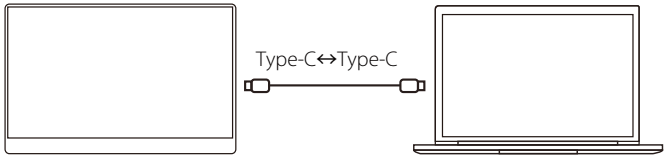

Only 1 Type-C ⇔ Type-C cable is needed for power and A/V output.

Connect to an external power supply, if the power from USB port is not sufficient.

Connect to PC 2

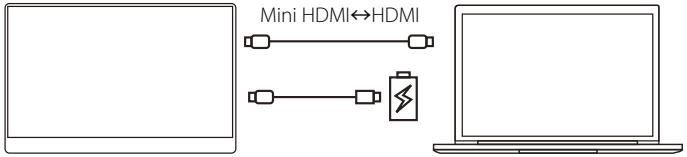

Mini HDMI⇔ HDMI for video and audio, Type-C ⇔ USB for power supply.

Connect to external power supply using Type-C ⇔ USB Cable.

Connect to Smart Phone

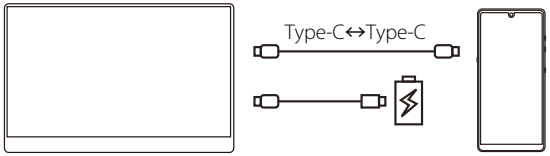

Connect to an external power supply ; when connecting to a smart phone.

iPhone connection requires a Lightning-Digital AV adapter.

Connect to Nintendo Switch

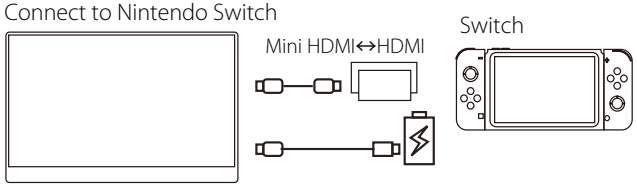

After connecting Nintendo Switch to its dock, connect the monitor to the dock using Mini HDMI⇔ HDMI Cable. Connect to external power supply using Type-C ⇔ USB Cable.

Setting Details



E Jog Dial

- Brightness/Contrast
- Color Setting
- Audio Setting
- Other Setting
- Input

There are various setting functions with the jog dial button that is located to the right side of the stand.

F Power Button

- Select Input Source
- Return in OSD menu

1. Brightness/Contrast

① Press the jog dial 1 time. The OSD menu will show up on the screen’ s left bottom corner.

② To select items in the menu, press the jog dial up and down.

Example: Brightness/Contrast setting steps

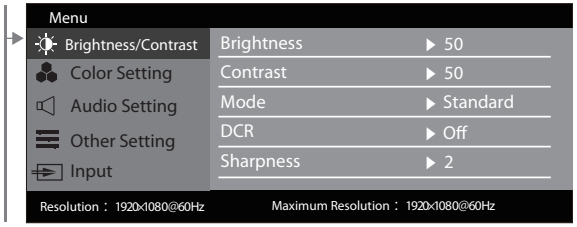

①-2 Brightness→Brightness

③ After selecting an item, press the jog dial 1 more time to enter sub-menu.

④ In the sub- menu, press the jog dial up and down to select, and then press the jog dial 1 more time to enter parameter setting.

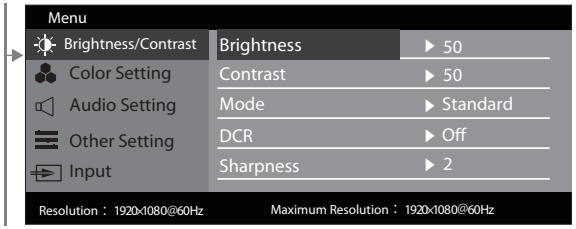

①-3 Brightness→Brightness→0～100

⑤ Move jog dial up and down to selected parameters.

⑥ Press the Power button to leave OSD menu when you finish.

Press the power button to return to desired menu.

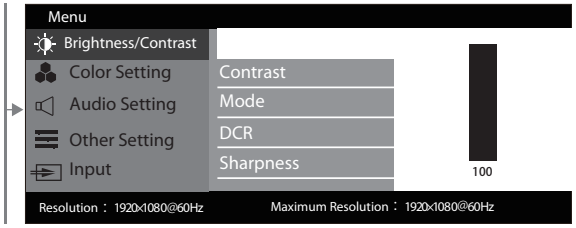

② Color Setting

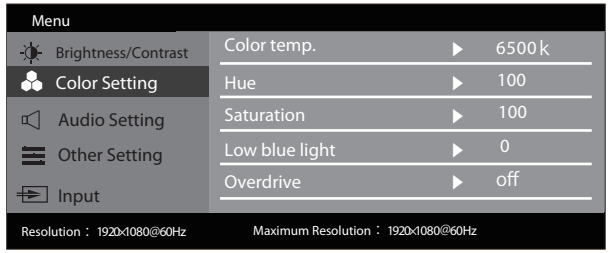

①Color temperature = 6500k / 9300k / user
User setting can be fine-tuned
②Hue = 0～100
③Saturation = 0～100
④ Low blue light= 0～100
⑤Overdrive = On / Off

③ Audio Setting

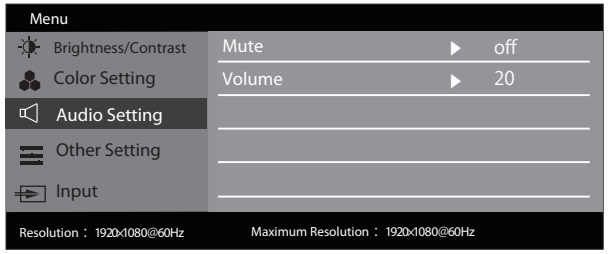

①Mute＝On/Off

②Volume＝0 ～ 100

④ Other Setting

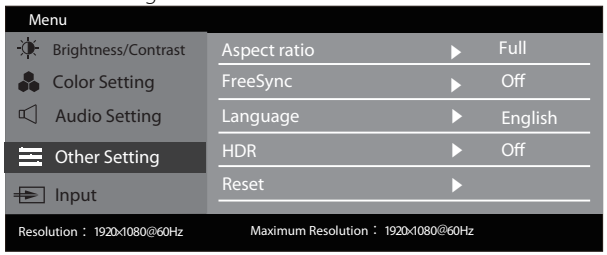

①Aspect ratio = Full / 4:3
②FreeSync=On / Off
③Language＝English/Deutsch/ Español 中文 / 日本語

④HDR = Off / Auto / On
⑤Reset＝Attention:After selecting reset, one press on the jog dial will reset right away. There will not be any pop up to seek re-confirmation.

⑤ Input

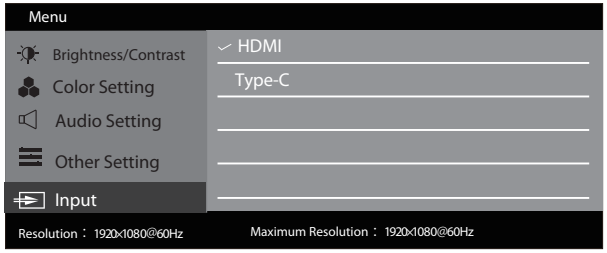

①HDMI
②Type-C
There are two options for input:Type-C or HDMI.

Q&A

Question	Answer
Q. The display is off and there is no power.	A. Press the power button to check if the monitor is turned on, check if the cable is properly connected to the power supply.
Q. The display is off and the power indicator is red.	A. Check if the connected device is connected to its power supply properly. Check if the signal cable is properly connected and that it has no damage . Try to connect with other devices to single out the problem.
Q. The screen image color does not look right (color block, color cast, etc.)	A. Check to make sure cables are well connected and connector pins are not bent.
Q. The screen display is flickering.	A. C When the screen is flickering, check if the power supply is providing sufficient power (wattage). 15W or above is recommended.

After Sales Service

Please read and keep the warranty policies carefully. A purchase record/ receipt is needed by the time of after sales service.

Within the warranty period, repair or replacement service will be provided at the manufacturer's disposition. However, you may be charged for repair services for failure or damage, caused by ignorance on safety precautions, or disassembly/ remodeling without permission.

For disposal, please handle in accordance with local waste regulations. The product specifications are subject to change without notice.

For questions or concerns regarding repair or inspection, please contact cs@santek.us

Warranty Policy

This product is guaranteed by the manufacturer for 6 months from the date of receipt.
The manufacturer will provide repair or replacement at its disposition, during the warranty period, if quality problems are found in the product itself. Followings are not covered:

1. Out of warranty period.
2. When the LCD panel is purposely scratched, bumped, deformed, or dented.
3. Disassembly or repair by an unauthorized service person.
4. Damage caused by accidental factors or human behavior and external forces (including operational mistakes, handling, bumping, input of inappropriate voltage, etc.)
5. Use of non-standard computer components.
6. Damage caused by force majeure such as natural disasters (e.g. Earthquake, fire, floods, etc.)

When returning, exchanging, or repairing this product, contact the seller and send back with the used packaging material. Service that are out of warranty period will be charged.
(Both technical service fee and parts replacement fee).

Privacy Policy

We strictly comply with the privacy laws that deal with the regulating, storing, and using of personal information such as address, name, and telephone number of our customers. Your personal information may be used and recorded for our inquiry reply and repair service purposes.

Monitor Specifications

Screen Type	IPS
Screen Size	15.6 inch / 344.16(H) ×193.59(V)
Resolution	1,920 x 1,080
Aspect Ratio	16 : 9
Color Gamut	45% NTSC
Color Depth	16.78 Million colors
Color Temperature	6,500K typ.
Brightness	300 cd/m^2
Contrast Ratio	1,000 : 1
Viewing Angle	Horizontal 170° Vertical 170°
Refresh Rate	60 Hz
Net Weight	870 g
Dimension	356 x 223 x 13.5 mm
HDR Support	Yes
FreeSync Support	Yes
Power Consumption	10W
Connectivity	2 Full-featured Type-C ports, Mini HDMI, 3.5mm Audio Jack
Built-in devices	Speakers(1W x 2)

Memo

修理のご依頼、その他製品についてご相談
For repair / product related inquiries, please contact
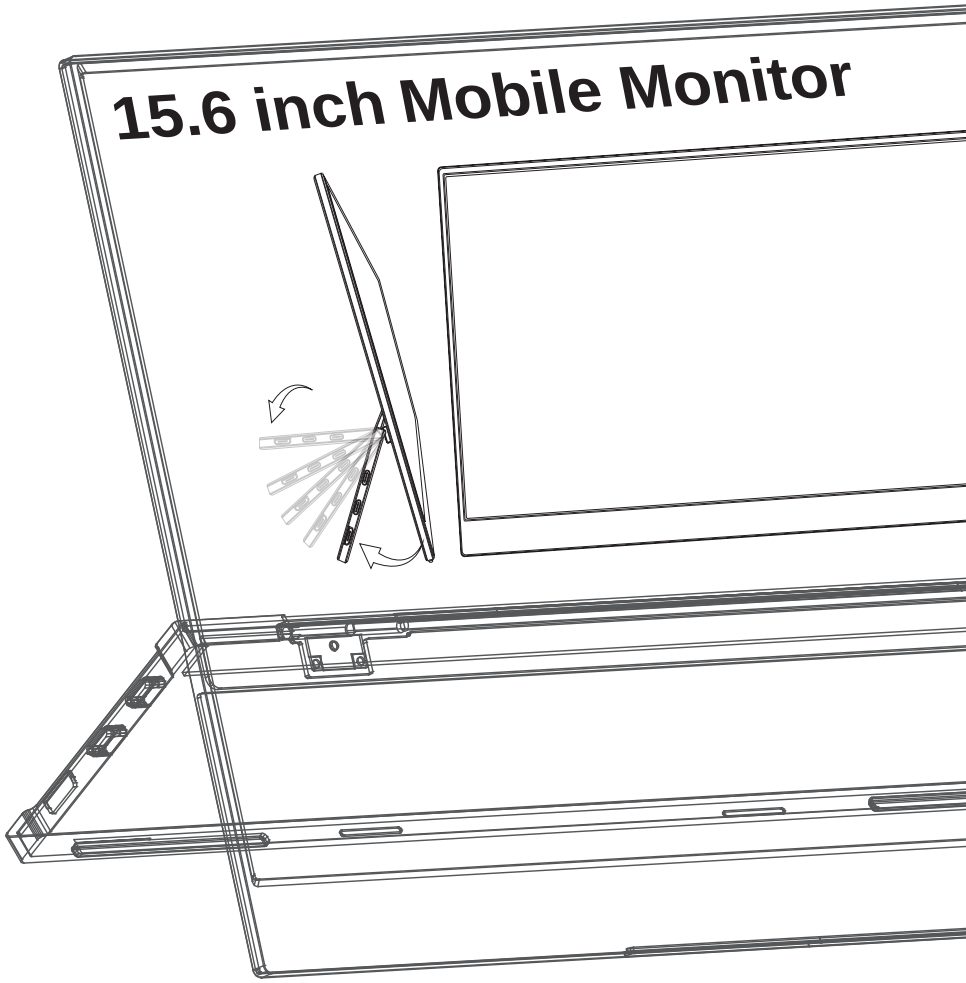
JAPAN	USA
サンテックショップ s.shop@santekshop.jp 〒650-0004 兵庫県神戸市中央区中山手通６丁目 1-16 受付時間：月曜～金曜　午前 10:00 - 午後 6:00 （土日・祝祭日及び夏季休暇、年末年始、 その他弊社指定休暇日を除く）	San Technology, Inc. cs@santek.us 6210 Marindustry Dr San Diego CA 92121 US